



eGalax Touch Driver INSTALL SOP

20150721-1

1. Copy the driver (eGTouch_v2.5.4300.L-x.zip) onto Unit.
2. Unzip driver below the catalogue of eGTouch_v2.5.4300.L-x

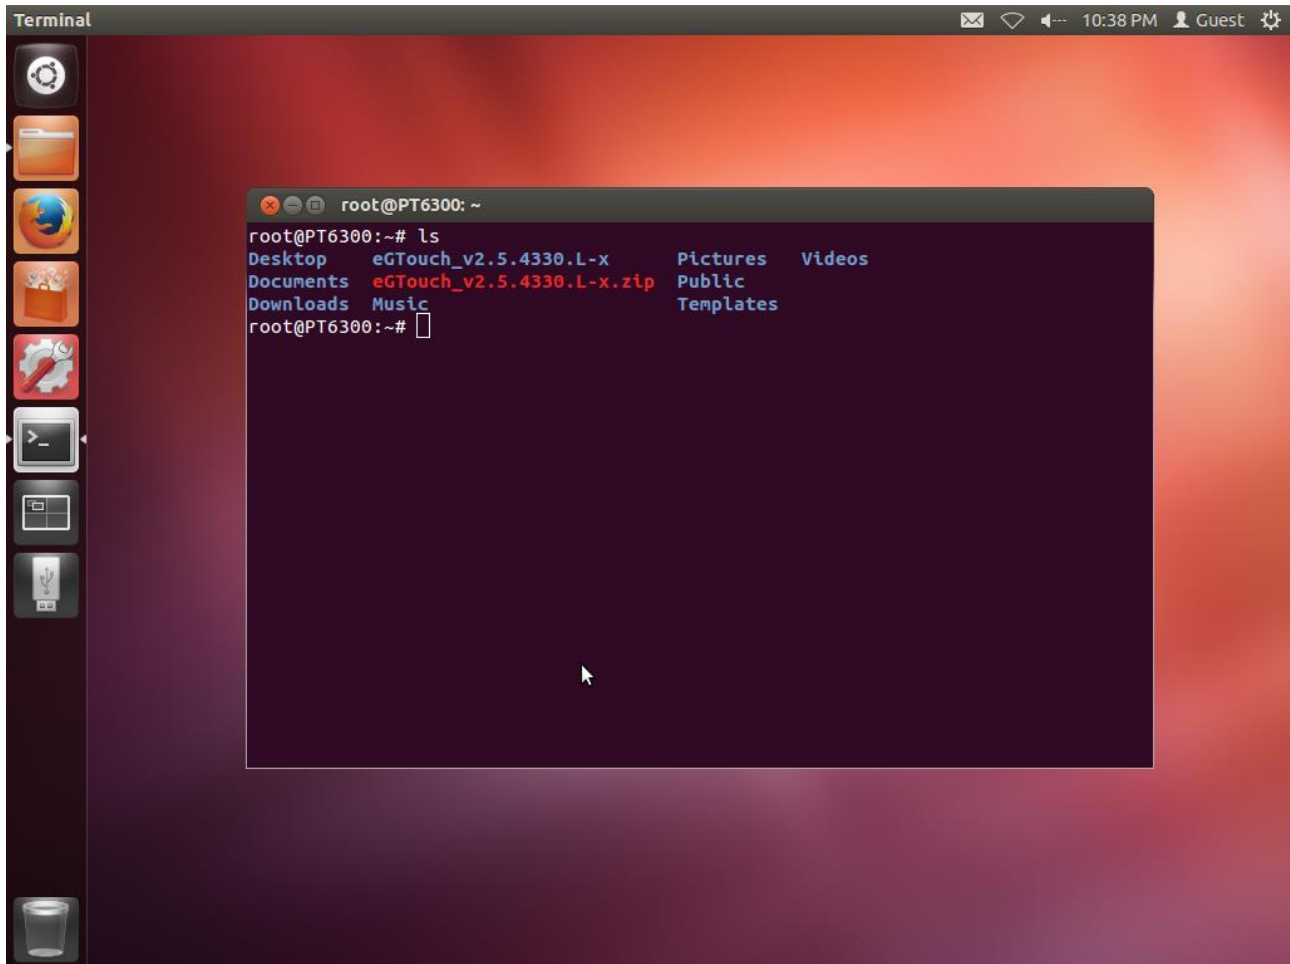

3. Going to the catalogue of eGTouchv2.5.4330.L-x

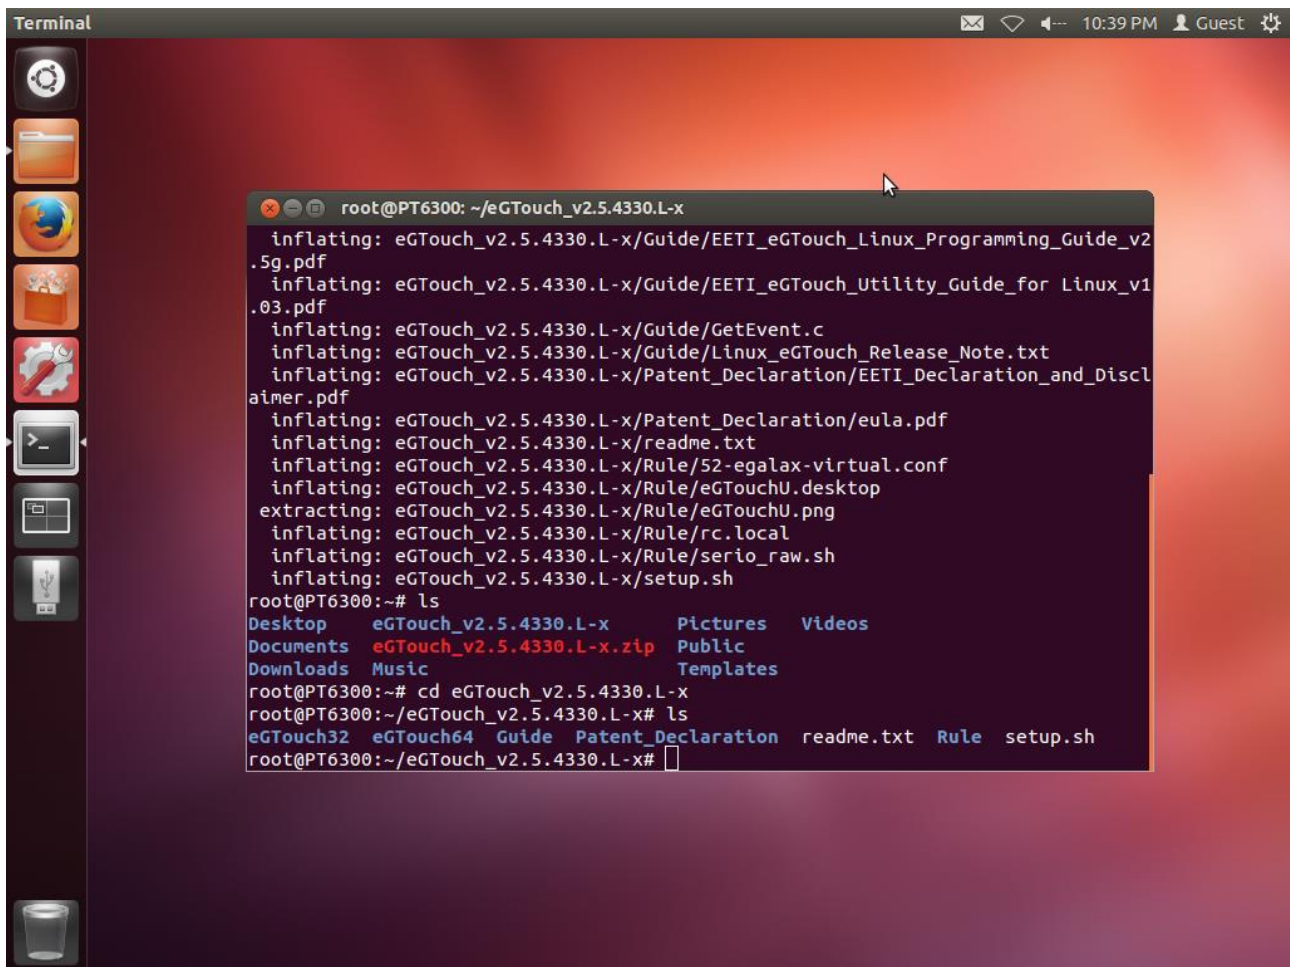

```
Terminal
root@PT6300: ~/eGTouch_v2.5.4330.L-x
inflating: eGTouch_v2.5.4330.L-x/Guide/EETI_eGTouch_Linux_Programming_Guide_v2
.5g.pdf
inflating: eGTouch_v2.5.4330.L-x/Guide/EETI_eGTouch_Utility_Guide_for_Linux_v1
.03.pdf
inflating: eGTouch_v2.5.4330.L-x/Guide/GetEvent.c
inflating: eGTouch_v2.5.4330.L-x/Guide/Linux_eGTouch_Release_Note.txt
inflating: eGTouch_v2.5.4330.L-x/Patent_Declaration/EETI_Declaration_and_Disc
laimer.pdf
inflating: eGTouch_v2.5.4330.L-x/Patent_Declaration/eula.pdf
inflating: eGTouch_v2.5.4330.L-x/readme.txt
inflating: eGTouch_v2.5.4330.L-x/Rule/52-egalax-virtual.conf
inflating: eGTouch_v2.5.4330.L-x/Rule/eGTouchU.desktop
extracting: eGTouch_v2.5.4330.L-x/Rule/eGTouchU.png
inflating: eGTouch_v2.5.4330.L-x/Rule/rc.local
inflating: eGTouch_v2.5.4330.L-x/Rule/serio_raw.sh
inflating: eGTouch_v2.5.4330.L-x/setup.sh
root@PT6300:~# ls
Desktop    eGTouch_v2.5.4330.L-x    Pictures  Videos
Documents  eGTouch_v2.5.4330.L-x.zip Public
Downloads  Music                    Templates
root@PT6300:~# cd eGTouch_v2.5.4330.L-x
root@PT6300:~/eGTouch_v2.5.4330.L-x# ls
eGTouch32 eGTouch64 Guide Patent_Declaration readme.txt Rule setup.sh
root@PT6300:~/eGTouch_v2.5.4330.L-x#
```

4. Running the installation program (bash setup.sh)

```

root@PT6300: ~/eGTouch_v2.5.4330.L-x
.03.pdf
  inflating: eGTouch_v2.5.4330.L-x/Guide/GetEvent.c
  inflating: eGTouch_v2.5.4330.L-x/Guide/Linux_eGTouch_Release_Note.txt
  inflating: eGTouch_v2.5.4330.L-x/Patent_Declaration/EETI_Declaration_and_Disc
aimer.pdf
  inflating: eGTouch_v2.5.4330.L-x/Patent_Declaration/eula.pdf
  inflating: eGTouch_v2.5.4330.L-x/readme.txt
  inflating: eGTouch_v2.5.4330.L-x/Rule/52-egalax-virtual.conf
  inflating: eGTouch_v2.5.4330.L-x/Rule/eGTouchU.desktop
  extracting: eGTouch_v2.5.4330.L-x/Rule/eGTouchU.png
  inflating: eGTouch_v2.5.4330.L-x/Rule/rc.local
  inflating: eGTouch_v2.5.4330.L-x/Rule/serio_raw.sh
  inflating: eGTouch_v2.5.4330.L-x/setup.sh
root@PT6300:~# ls
Desktop    eGTouch_v2.5.4330.L-x    Pictures  Videos
Documents  eGTouch_v2.5.4330.L-x.zip Public
Downloads  Music                    Templates
root@PT6300:~# cd eGTouch_v2.5.4330.L-x
root@PT6300:~/eGTouch_v2.5.4330.L-x# ls
eGTouch32 eGTouch64 Guide Patent_Declaration readme.txt Rule setup.sh
root@PT6300:~/eGTouch_v2.5.4330.L-x# bash setup.sh

(*) Driver installer for touch controller
(*) Script Version = 1.04.4330

(I) Check user permission: root, you are the supervisor.
(I) Platform application binary interface = x86_64
(W) X server detected.

Declaration and Disclaimer
The programs, including but not limited to software and/or firmware (hereinafter
referred to "Programs" or "PROGRAMS", are owned by eGalax_eMPIA Technology Inc.
(hereinafter referred to EETI) and are compiled from EETI Source code. EETI her
eby grants to licensee a personal, non-exclusive, non-transferable license to co
py, use and create derivative works of Programs for the sole purpose in conjunct
ion with an EETI Product, including but not limited to integrated circuit and/or
controller. Any reproduction, copies, modification, translation, compilation, a
pplication, or representation of Programs except as specified above is prohibite
d without the express written permission by EETI.

```

5. Input “Y”

```
Terminal 10:40 PM Guest

root@PT6300: ~/eGTouch_v2.5.4330.L-x
referred to "Programs" or "PROGRAMS", are owned by eGalax_eMPIA Technology Inc.
(hereinafter referred to EETI) and are compiled from EETI Source code. EETI her
eby grants to licensee a personal, non-exclusive, non-transferable license to co
py, use and create derivative works of Programs for the sole purpose in conjunct
ion with an EETI Product, including but not limited to integrated circuit and/or
controller. Any reproduction, copies, modification, translation, compilation, a
pplication, or representation of Programs except as specified above is prohibite
d without the express written permission by EETI.

Disclaimer: EETI MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD
TO PROGRAMS, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTAB
ILITY AND FITNESS FOR A PARTICULAR PURPOSE. EETI reserves the right to make chan
ges without further notice to the Programs described herein. Licensee agrees tha
t EETI does not assume any liability, damages or costs, including but not limite
d to attorney fees, arising out from Programs themselves or those arising out fr
om the application or combination Programs into other products or circuit. The u
se or the inclusion of EETI's Programs implies that the Licensee assumes all ris
k of such use and in doing so indemnifies EETI against all charges, including bu
t not limited to any claims to infringement of any third party's intellectual pr
operty right.

Do you agree with above patent declaration?
[Y] Yes, I agree.  [N] No, I don't agree.

```

6. Input 1 (RS232)

```
root@PT6300: ~/eGTouch_v2.5.4330.L-x 10:40 PM Guest

(*) Driver installer for touch controller
(*) Script Version = 1.04.4330

(I) Check user permission: root, you are the supervisor.
(I) Platform application binary interface = x86_64
(W) X server detected.

Declaration and Disclaimer
The programs, including but not limited to software and/or firmware (hereinafter
referred to "Programs" or "PROGRAMS", are owned by eGalax_eMPIA Technology Inc.
(hereinafter referred to EETI) and are compiled from EETI Source code. EETI her
eby grants to licensee a personal, non-exclusive, non-transferable license to co
py, use and create derivative works of Programs for the sole purpose in conjunct
ion with an EETI Product, including but not limited to integrated circuit and/or
controller. Any reproduction, copies, modification, translation, compilation, a
pplication, or representation of Programs except as specified above is prohibite
d without the express written permission by EETI.

Disclaimer: EETI MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD
TO PROGRAMS, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTAB
ILITY AND FITNESS FOR A PARTICULAR PURPOSE. EETI reserves the right to make chan
ges without further notice to the Programs described herein. Licensee agrees tha
t EETI does not assume any liability, damages or costs, including but not limite
d to attorney fees, arising out from Programs themselves or those arising out fr
om the application or combination Programs into other products or circuit. The u
se or the inclusion of EETI's Programs implies that the Licensee assumes all ris
k of such use and in doing so indemnifies EETI against all charges, including bu
t not limited to any claims to infringement of any third party's intellectual pr
operty right.

Do you agree with above patent declaration?
[Y] Yes, I agree. [N] No, I don't agree.
y

(Q) Which interface controller do you use?
(I) [1] RS232 [2] USB [3] PS2 : 1
(I) Please confirm the touch controller is linked with your device. Press [Enter] key to continue.....

```


7. Input 1 (Default)

```
root@PT6300: ~/eGTouch_v2.5.4330.L-x
referred to "Programs" or "PROGRAMS", are owned by eGalax_eMPIA Technology Inc.
(hereinafter referred to EETI) and are compiled from EETI Source code. EETI her
eby grants to licensee a personal, non-exclusive, non-transferable license to co
py, use and create derivative works of Programs for the sole purpose in conjunct
ion with an EETI Product, including but not limited to integrated circuit and/or
controller. Any reproduction, copies, modification, translation, compilation, a
pplication, or representation of Programs except as specified above is prohibite
d without the express written permission by EETI.

Disclaimer: EETI MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD
TO PROGRAMS, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTAB
ILITY AND FITNESS FOR A PARTICULAR PURPOSE. EETI reserves the right to make chan
ges without further notice to the Programs described herein. Licensee agrees tha
t EETI does not assume any liability, damages or costs, including but not limite
d to attorney fees, arising out from Programs themselves or those arising out fr
om the application or combination Programs into other products or circuit. The u
se or the inclusion of EETI's Programs implies that the Licensee assumes all ris
k of such use and in doing so indemnifies EETI against all charges, including bu
t not limited to any claims to infringement of any third party's intellectual pr
operty right.

Do you agree with above patent declaration?
[Y] Yes, I agree. [N] No, I don't agree.
y

(Q) Which interface controller do you use?
(I) [1] RS232 [2] USB [3] PS2 : 1
(I) Please confirm the touch controller is linked with your device. Press [Enter] key to continue.....
.

(I) Found /etc/rc.local file.
(I) Found uinput at path /dev/uinput
(I) Place eGTouch driver archive to /usr/local/eGTouch64withX.
(I) Create eGTouch daemon shortcut in /usr/bin.
(I) Create eGTouchU tool shortcut in /usr/bin.
(I) Create eCalib tool shortcut in /usr/bin.
(I) Detach eGTouchD daemon execution from /etc/rc.local.
(I) Append eGTouch daemon execution into /etc/rc.local.

(Q) How many controllers do you want to plug-in to system? [1-10]
(I) Default [1]:1
```

8. Installation completed, restart unit.

```
root@PT6300: ~/eGTouch_v2.5.4330.L-x
Disclaimer: EETI MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD
TO PROGRAMS, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTAB
ILITY AND FITNESS FOR A PARTICULAR PURPOSE. EETI reserves the right to make chan
ges without further notice to the Programs described herein. Licensee agrees tha
t EETI does not assume any liability, damages or costs, including but not limite
d to attorney fees, arising out from Programs themselves or those arising out fr
om the application or combination Programs into other products or circuit. The u
se or the inclusion of EETI's Programs implies that the Licensee assumes all ris
k of such use and in doing so indemnifies EETI against all charges, including bu
t not limited to any claims to infringement of any third party's intellectual pr
operty right.

Do you agree with above patent declaration?
[Y] Yes, I agree. [N] No, I don't agree.
y

(Q) Which interface controller do you use?
(I) [1] RS232 [2] USB [3] PS2 : 1
(I) Please confirm the touch controller is linked with your device. Press [Enter] key to continue.....
.

(I) Found /etc/rc.local file.
(I) Found uinput at path /dev/uinput
(I) Place eGTouch driver archive to /usr/local/eGTouch64withX.
(I) Create eGTouch daemon shortcut in /usr/bin.
(I) Create eGTouchU tool shortcut in /usr/bin.
(I) Create eCalib tool shortcut in /usr/bin.
(I) Detach eGTouchD daemon execution from /etc/rc.local.
(I) Append eGTouch daemon execution into /etc/rc.local.

(Q) How many controllers do you want to plug-in to system? [1-10]
(I) Default [1]:1
1
(I) Device Num is set to 1
(W) Found udev rule: 52-egalax-virtual.conf.
(I) Create eGTouchU shortcut in application list.

(I) Driver installation completed. Setup version 1.04.4330.
(I) Please reboot the system.

root@PT6300:~/eGTouch_v2.5.4330.L-x#
```